




WISA®

INSTALLATION MONTAJ MONTAGE MONTÁŽNÝ INSTALLAZIONE


التجميع


MONTÁŽNÍ YCTAHOBKA INSTALAÇÃO INSTALACIÓN



نصب و استقرار

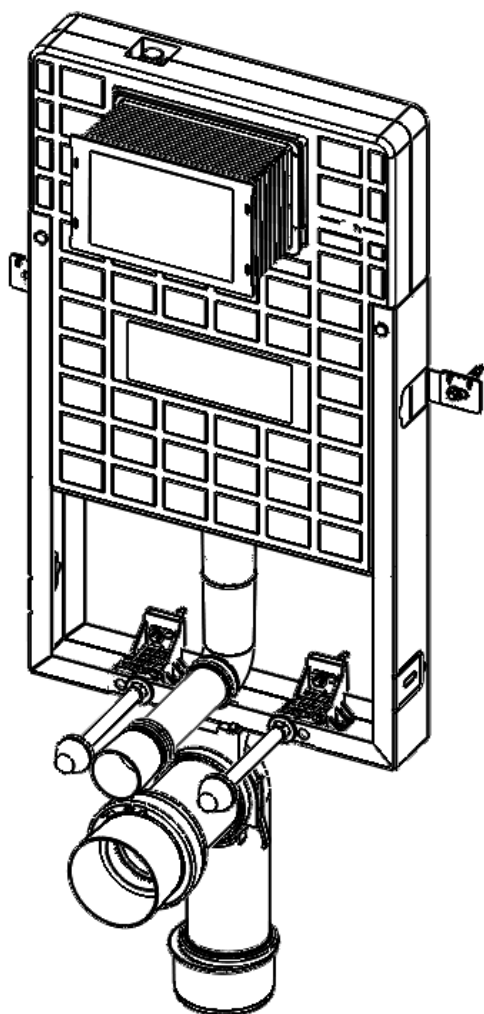


8050452996

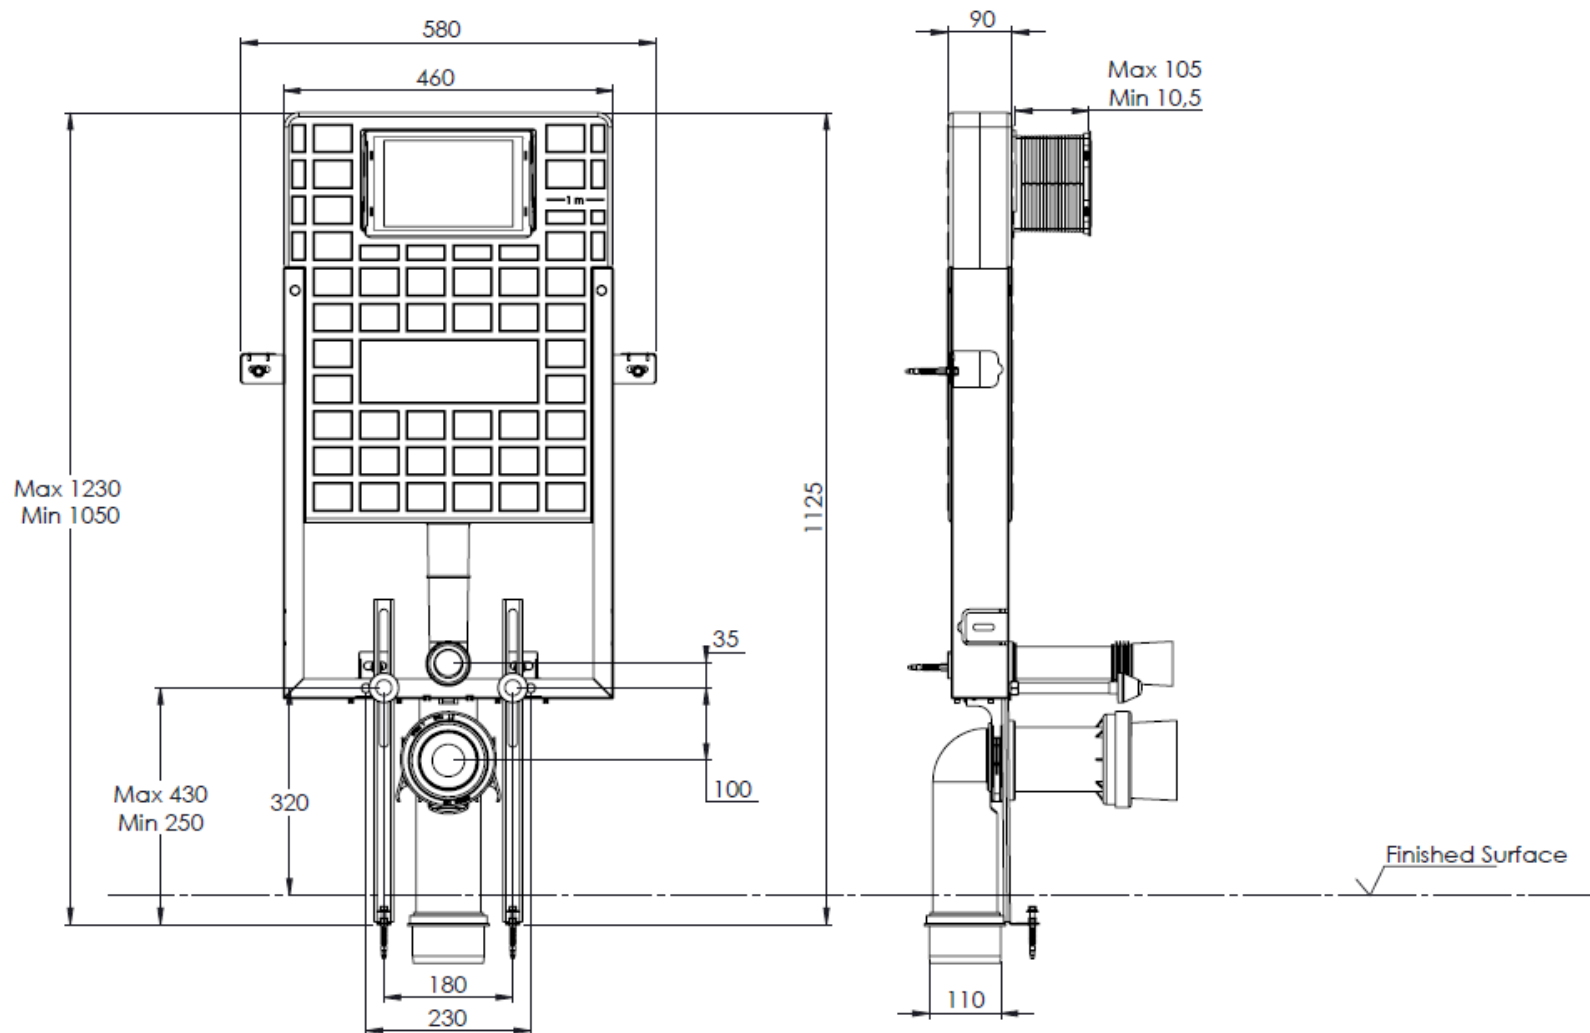

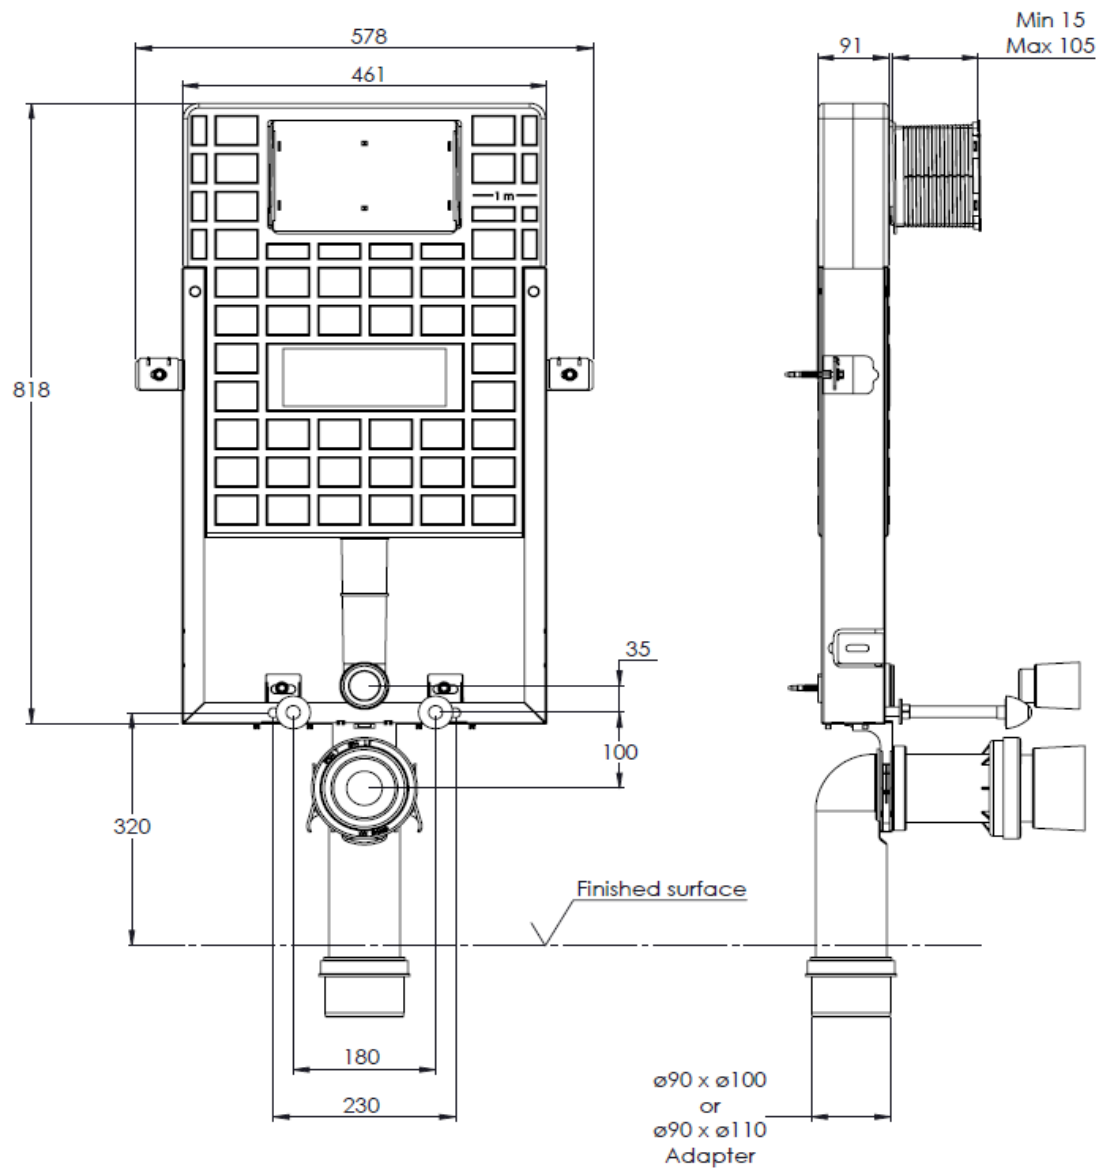


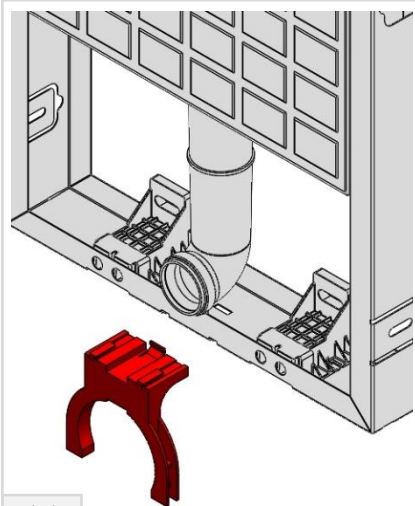


1.1

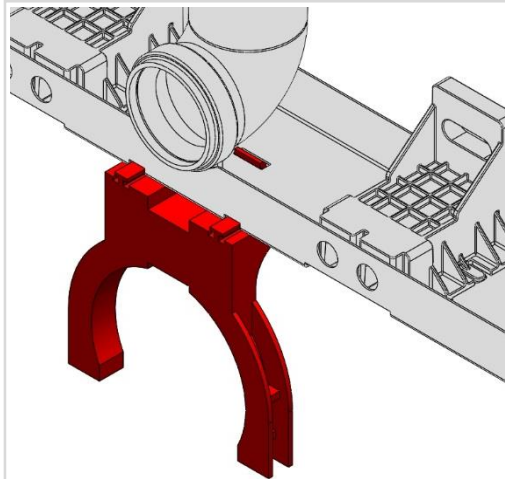


1.2

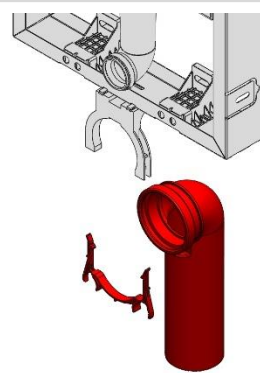



2.1

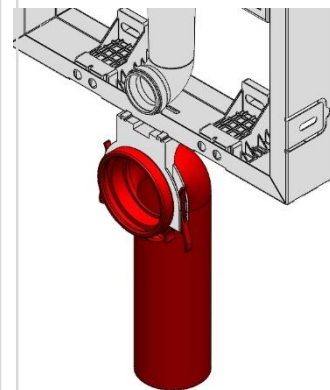


2.2


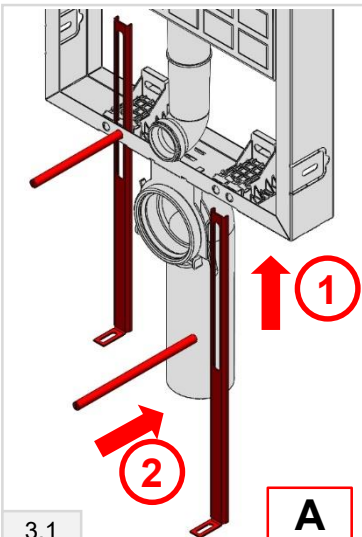


3.1

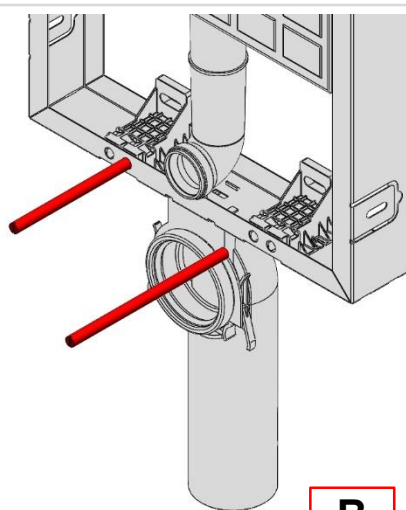
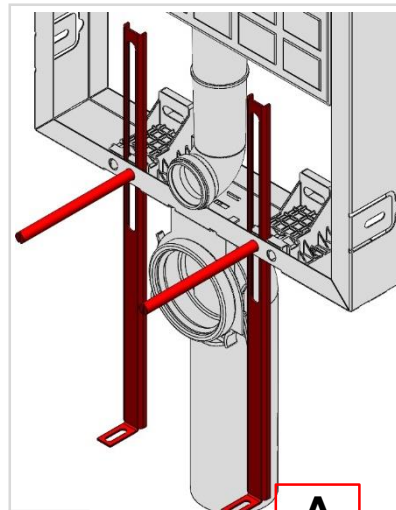
A**B**

3.2

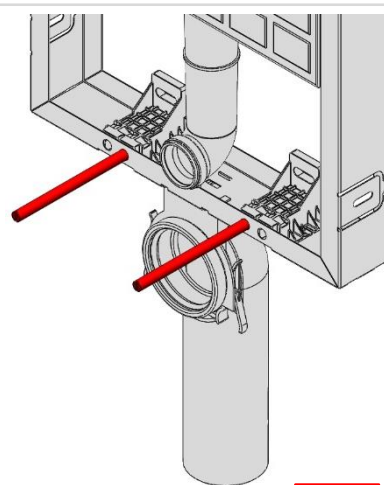
A**B**

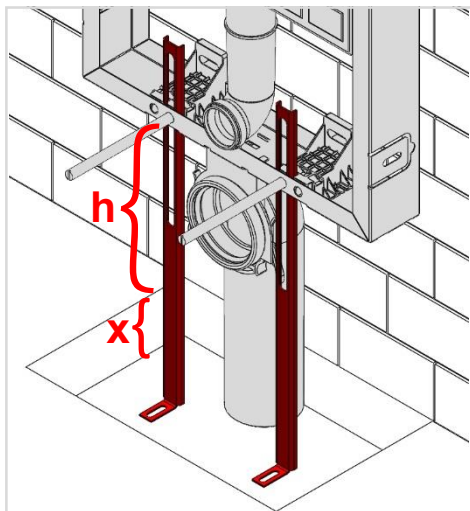


4

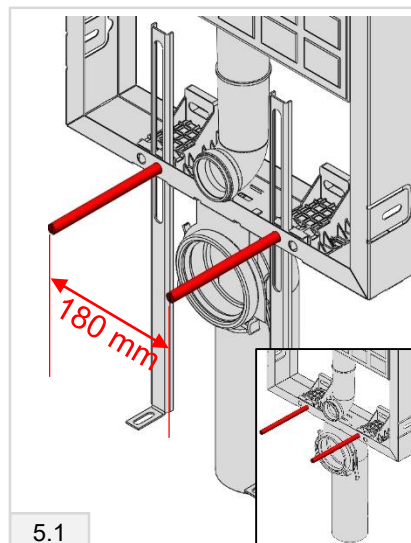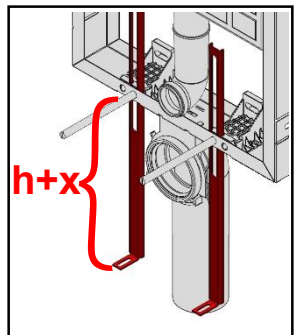


5.1

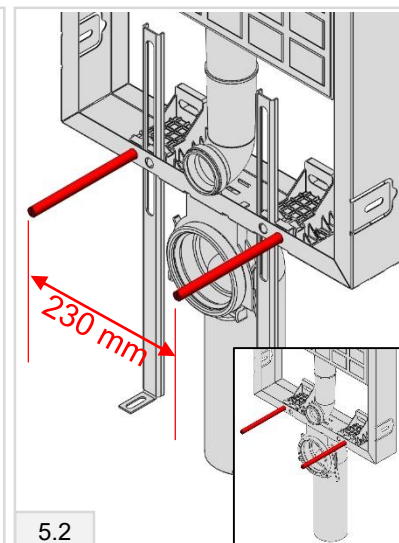


5.2

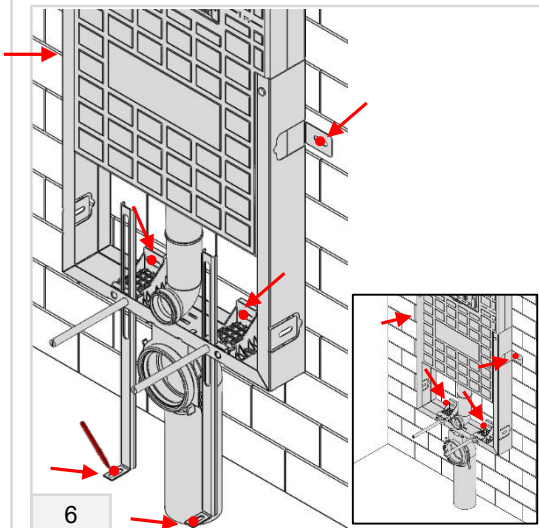


6

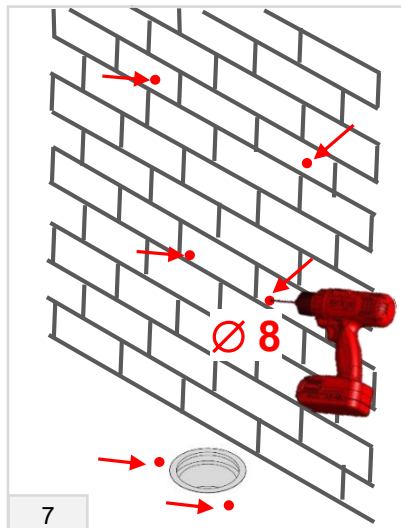

7

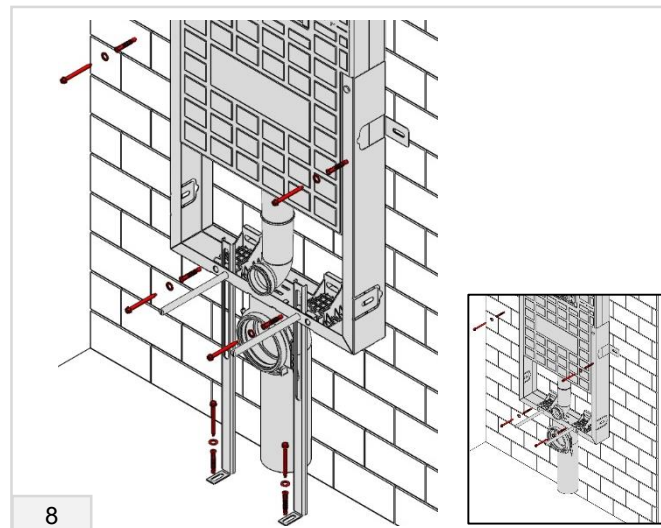


8

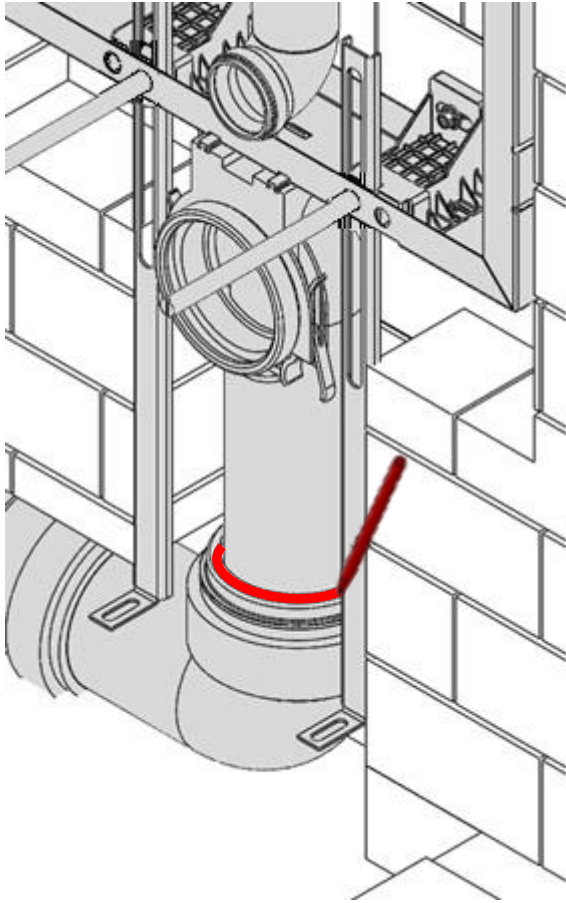


9.1


+30mm

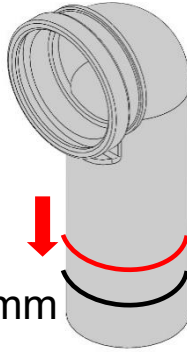


9.2

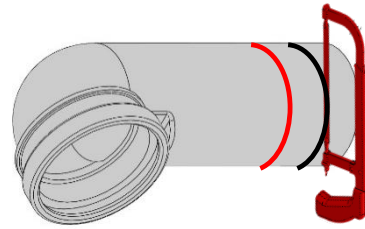


9.3

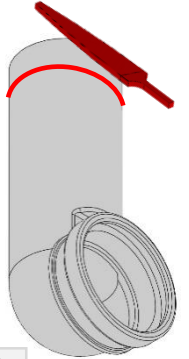



9.4

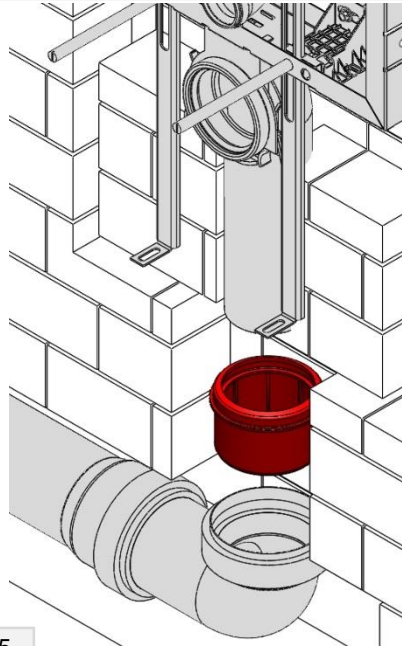


9.5

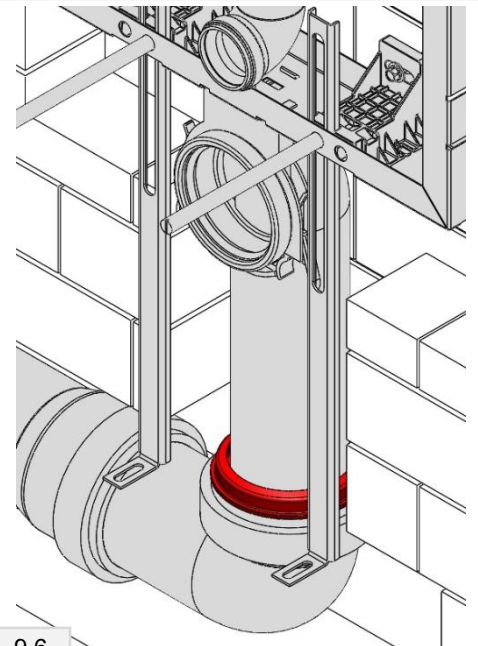


9.6

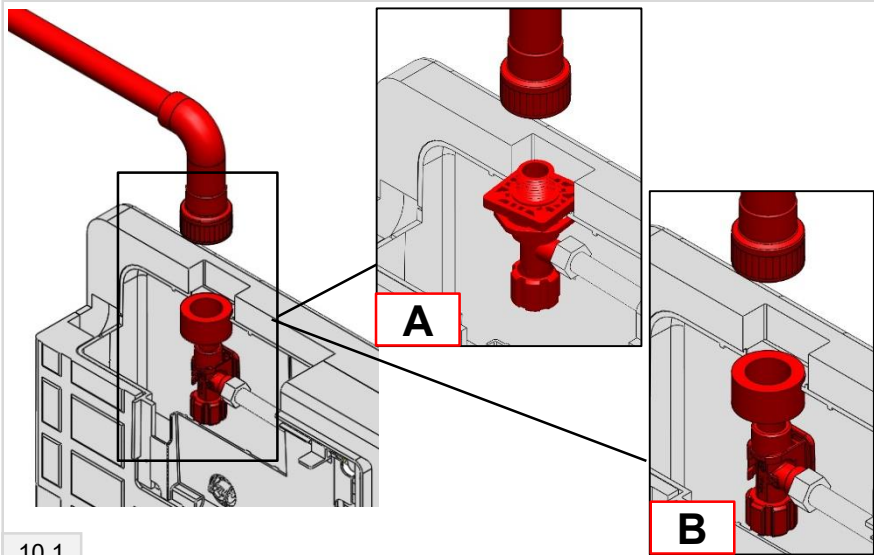


10.1

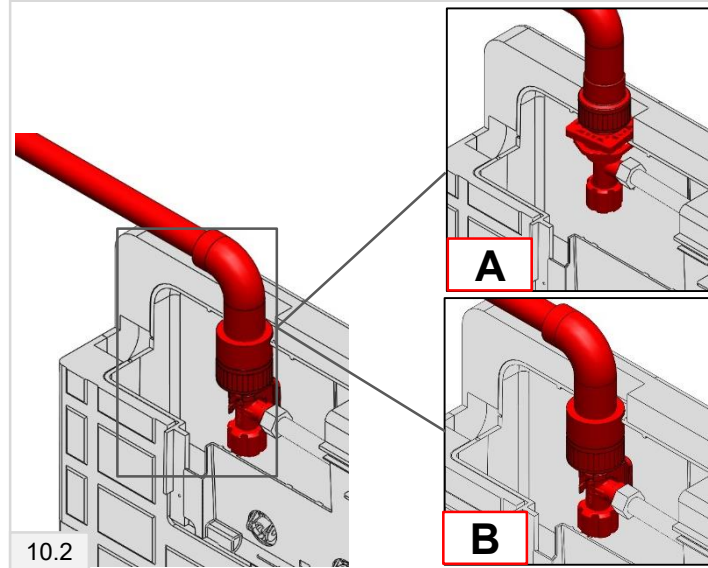


10.2

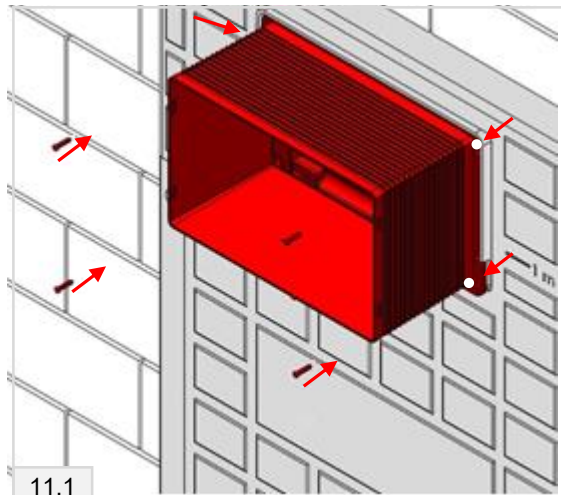



11.1

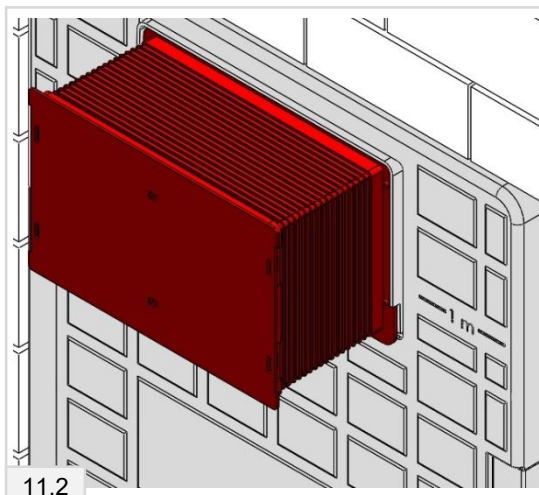


11.2

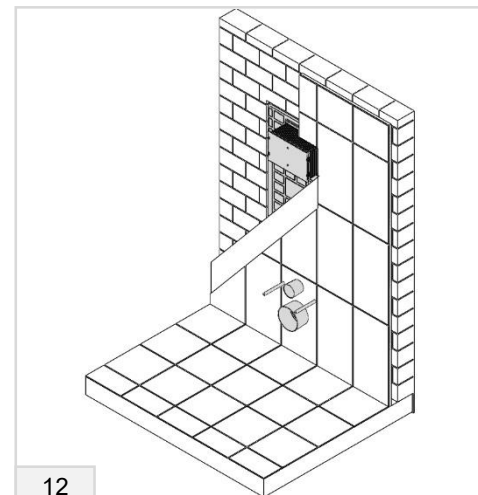




12

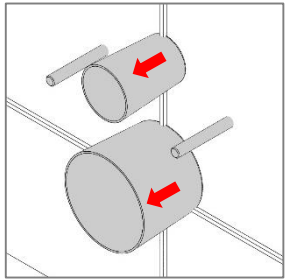


13.1

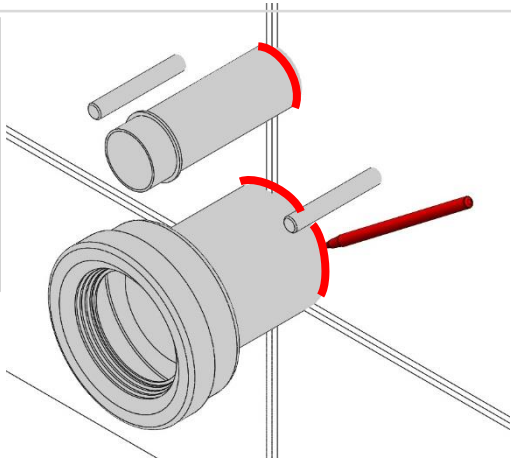



13.2

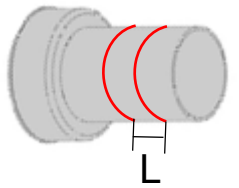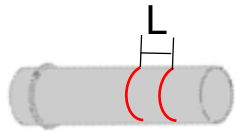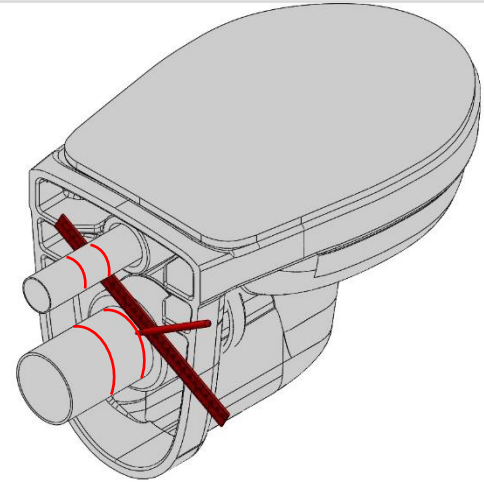


13.3

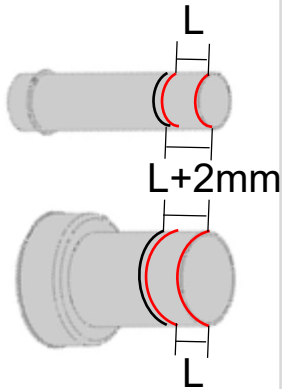







13.4

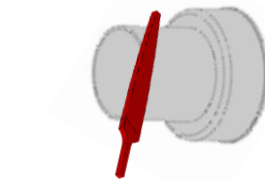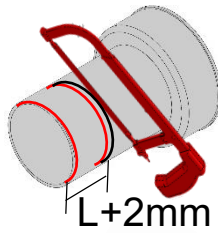


13.5

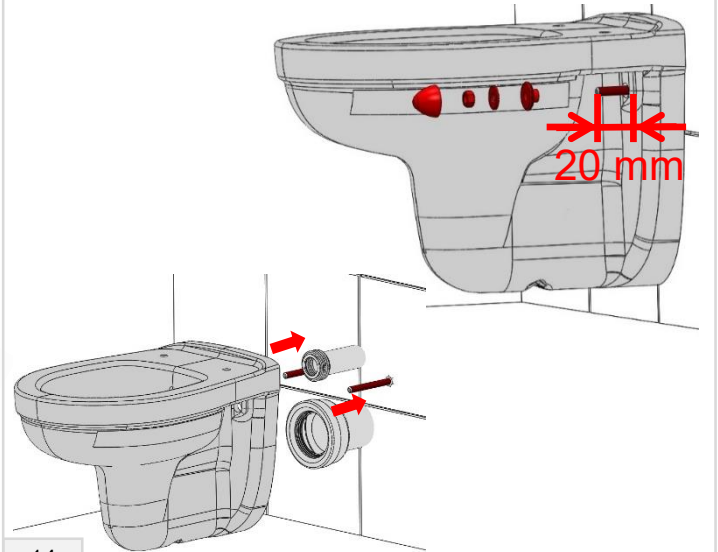


14

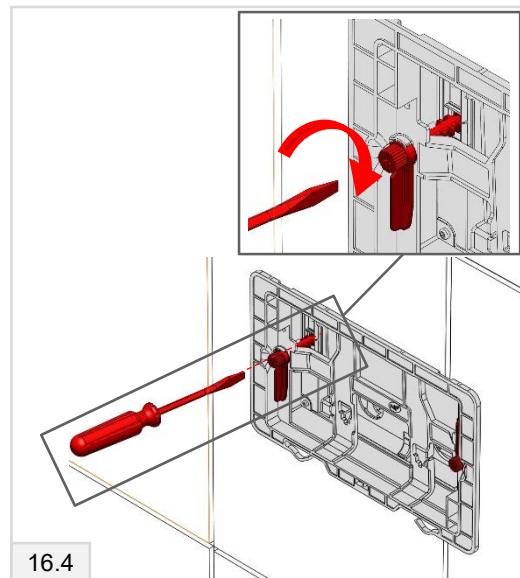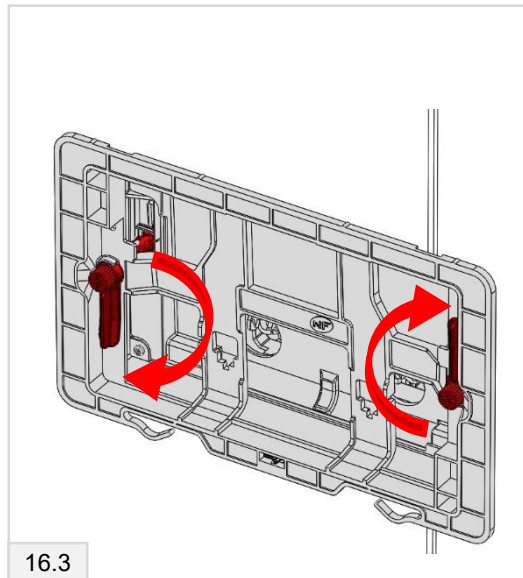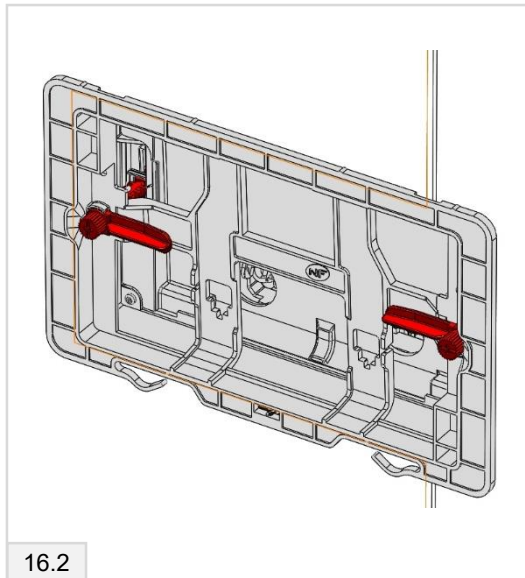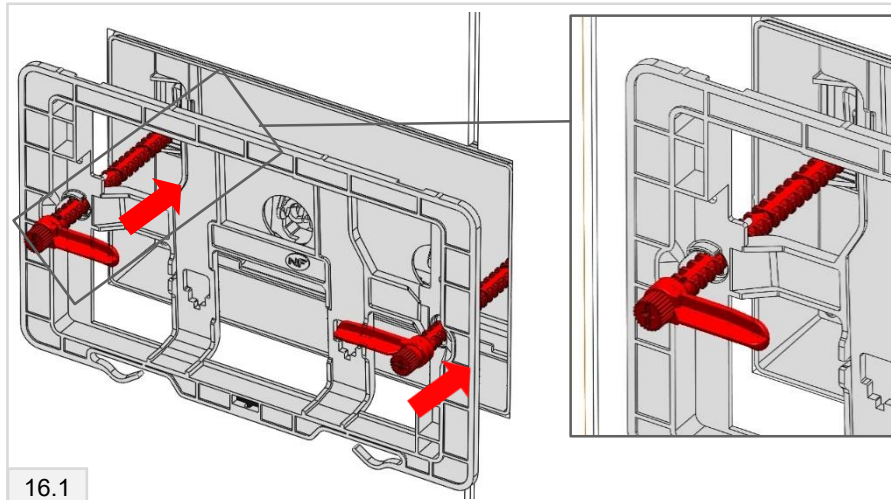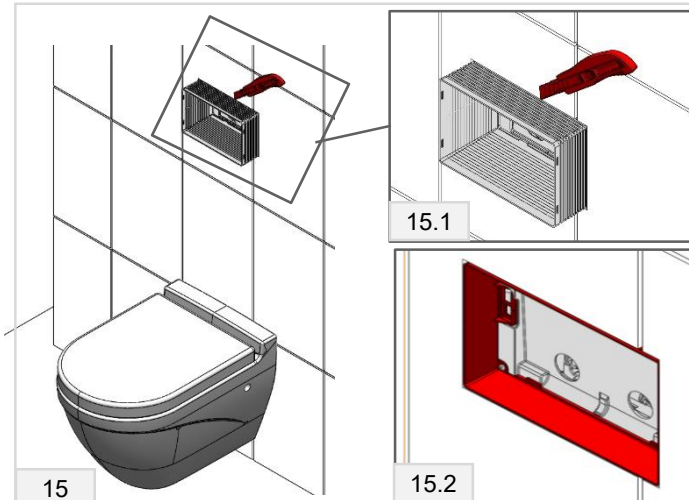



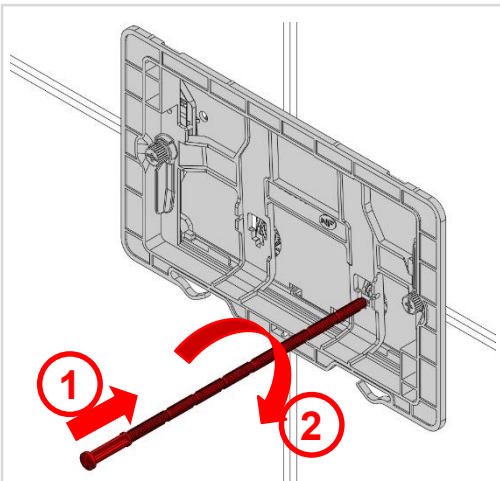


17.1

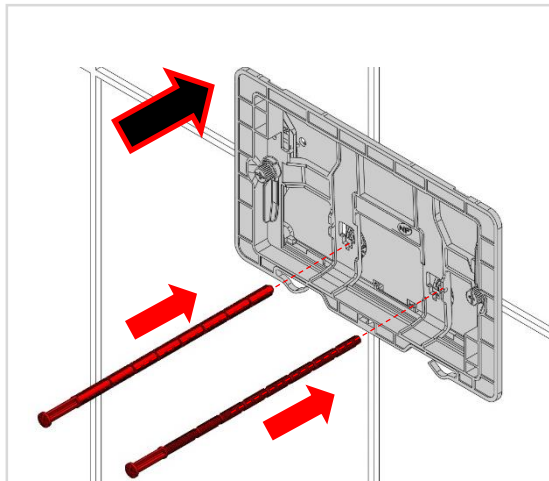


17.2

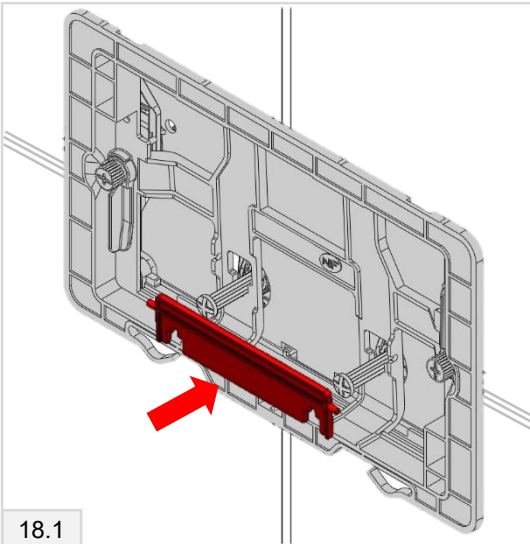
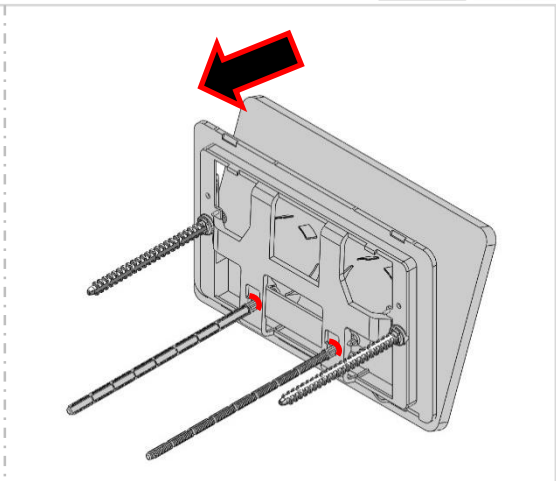








18.1

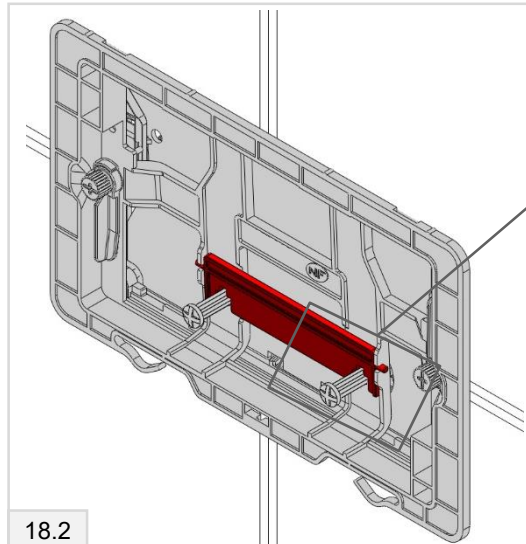


18.2

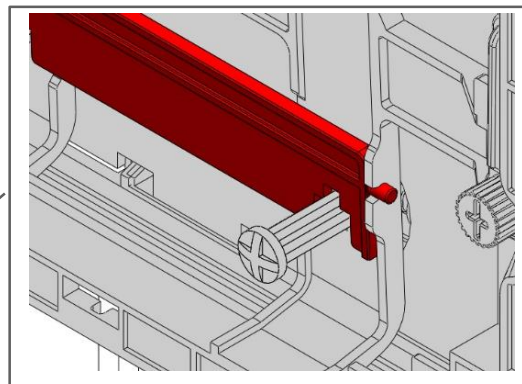


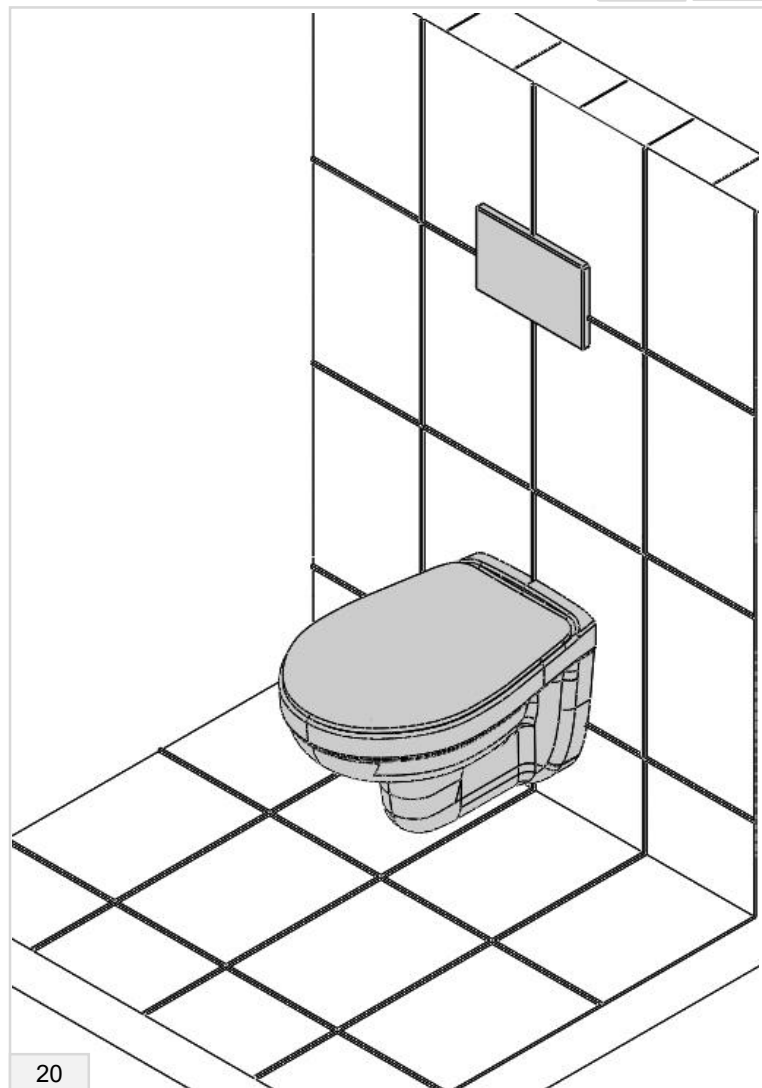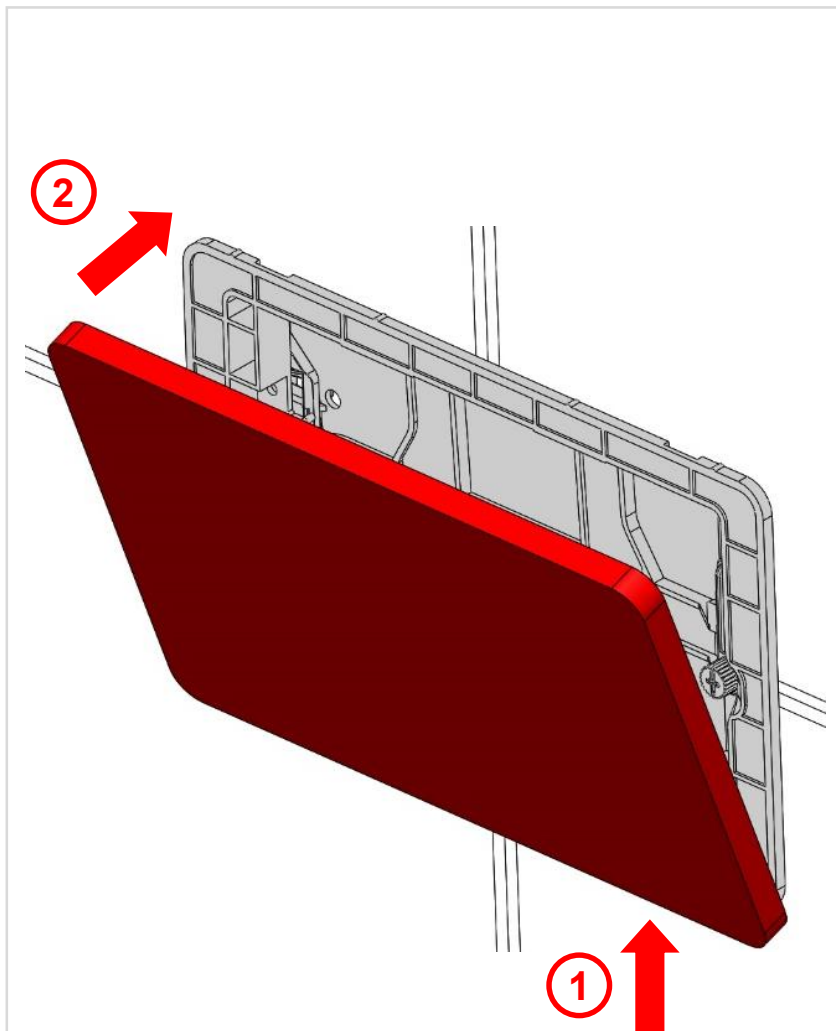

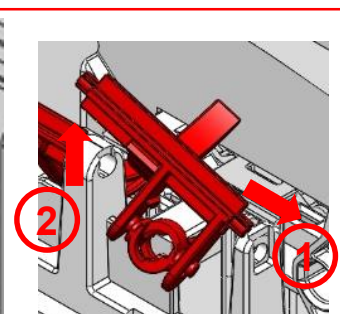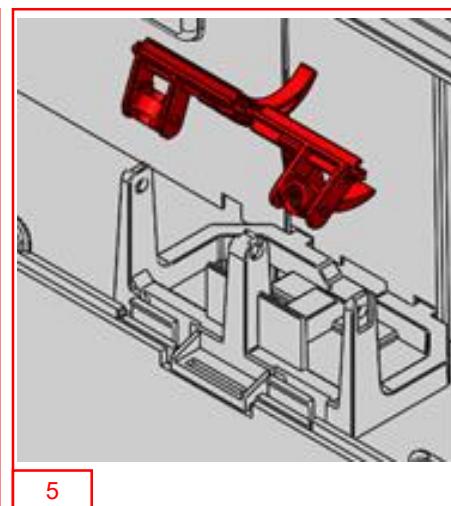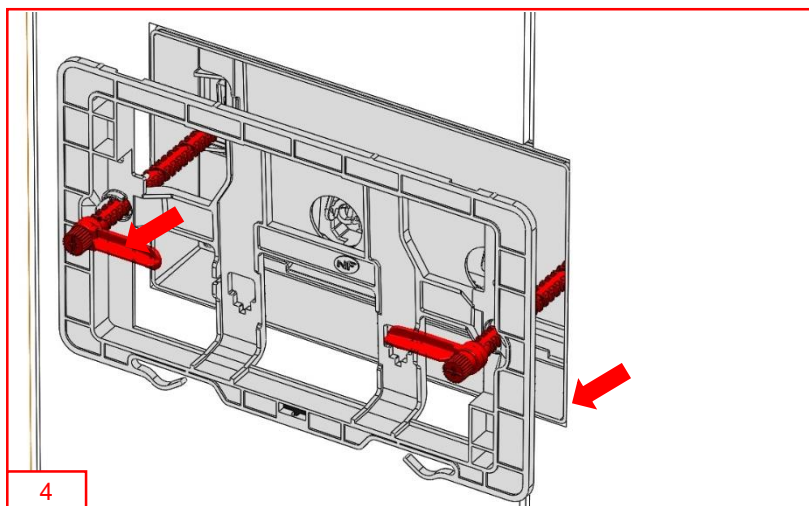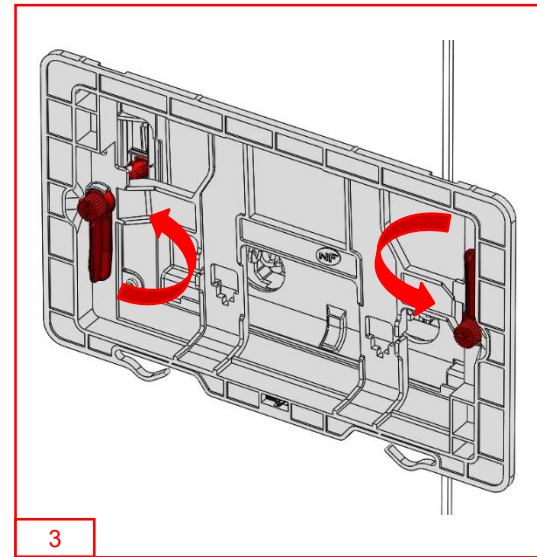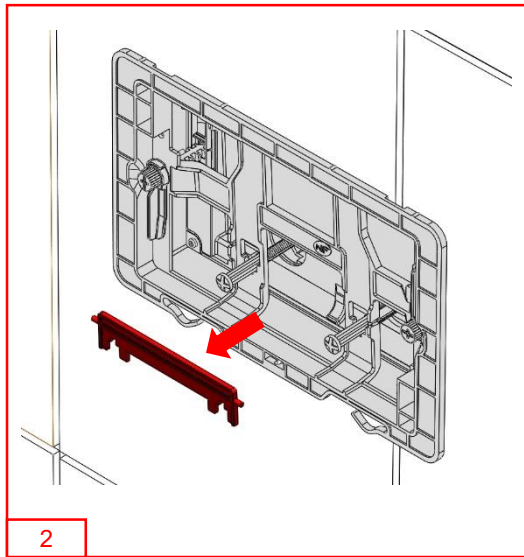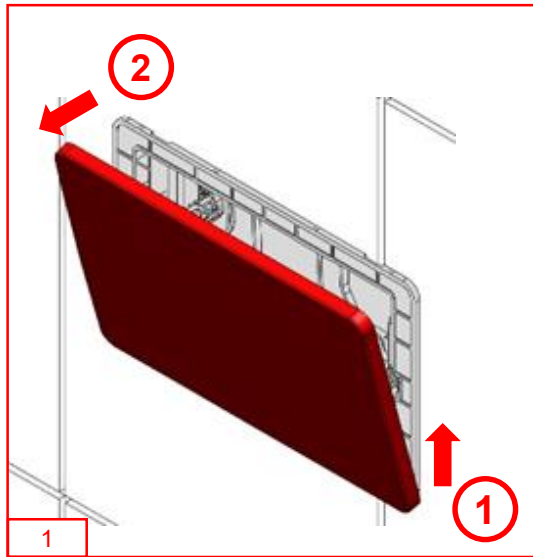


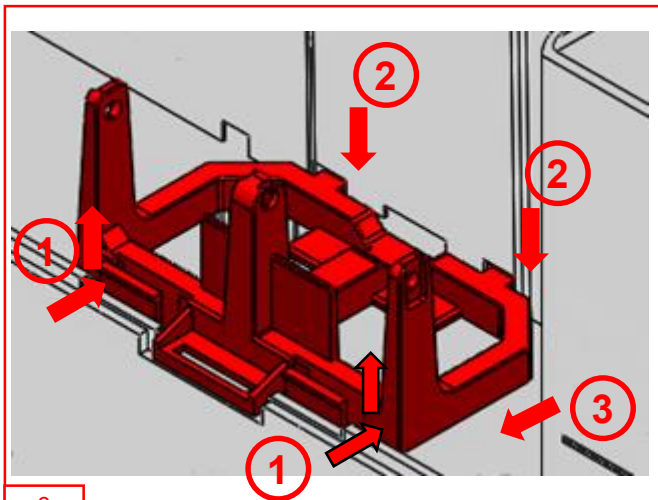


6

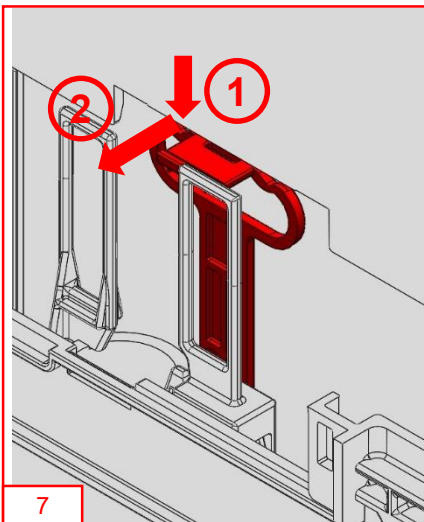


7

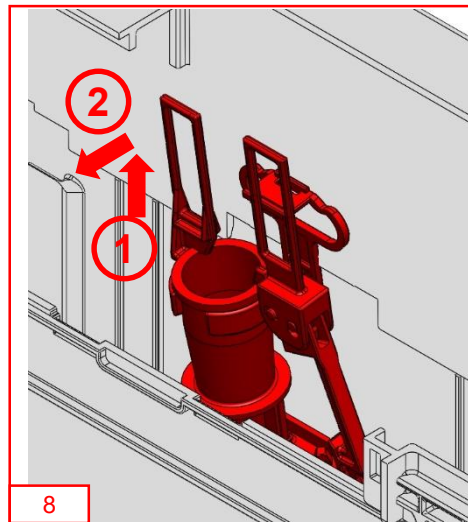


8

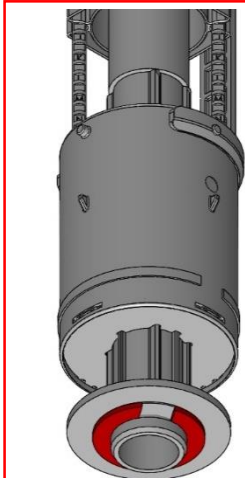

9

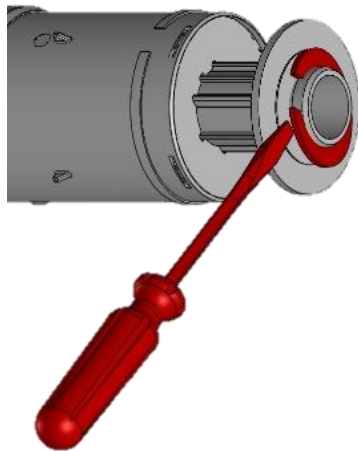


9.1

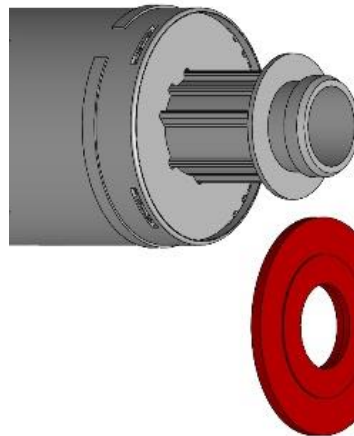


9.2




9.3

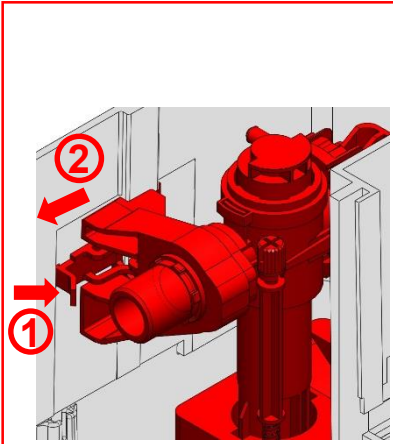


10.1

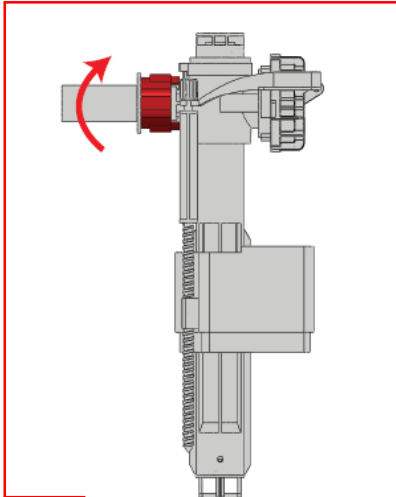


10.2

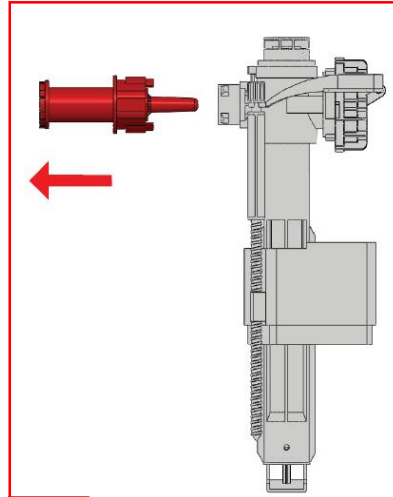


10.3

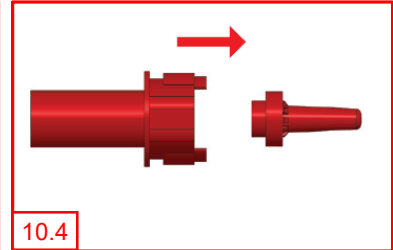


10.4

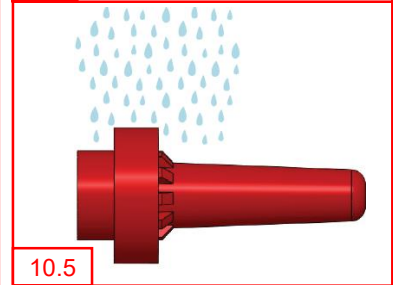

10.5

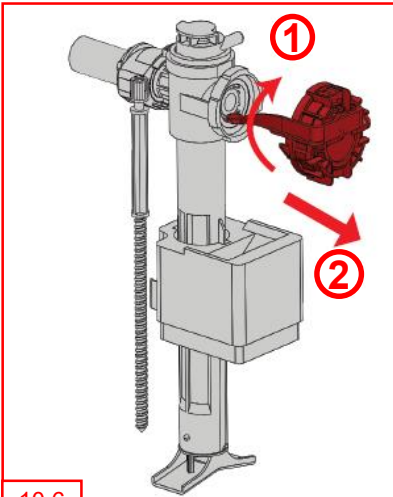


10.6

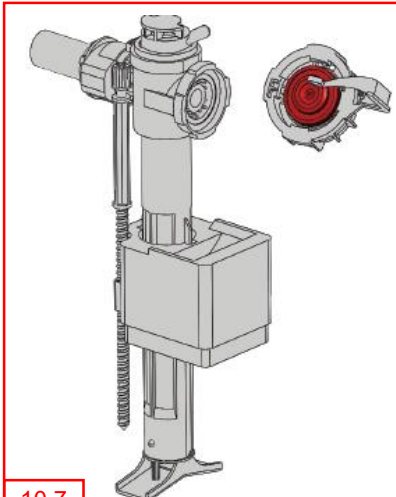

10.7



10.8

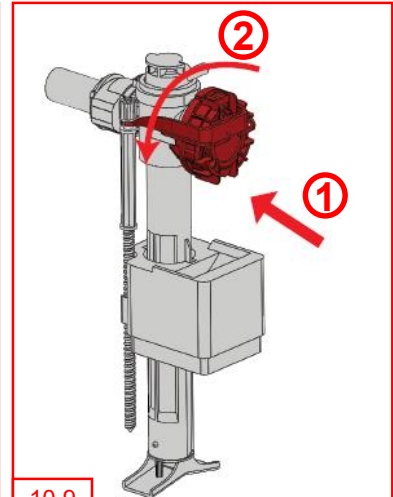

10.9